DVD Player

Basic Playback Features

1. To select the DVD/CD input source, press **SOURCE** on the main unit until "DVD/CD" appears on the display. You may also directly press **DVD/CD** on the remote.

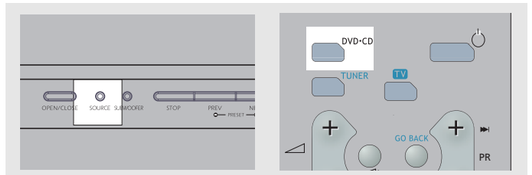

2. Press **OPEN/CLOSE** to open the tray and load a disc, with the label facing up. Press **OPEN/CLOSE** again to close the tray.

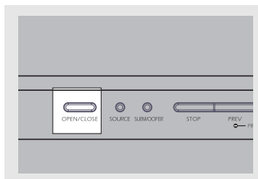

3. After inserting the disc, the unit may
- start playback automatically.
- show the disc menu, select the option “play movie” on screen and press **OK**.
- show the player’s main menu, select the option “play” and press **OK.**

4. Press **PLAY/PAUSE** on the main unit or press **PAUSE** on the remote to pause playing during playback. Press again to resume normal playback.

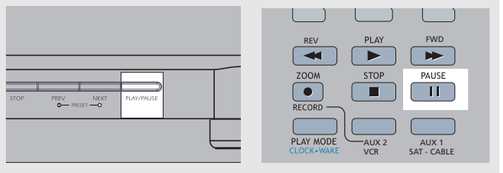

4. Press **PREV** to go back to the previous chapter or **NEXT** to move to the next chapter.

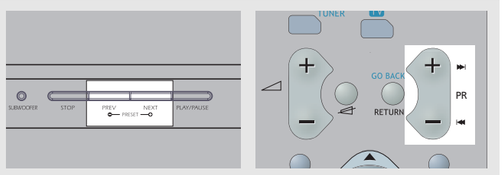

• Press **STOP** once to stop playback and go into resume mode.

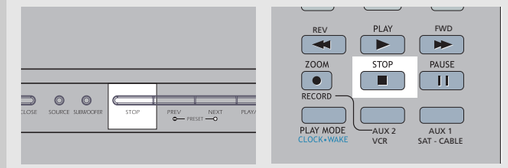

Quick search

1. While playing a disc, press **REV** on the remote control to scan backward through the disc. Press **FWD** on the remote to scan forward.
Press repeatedly to change the searching speed.

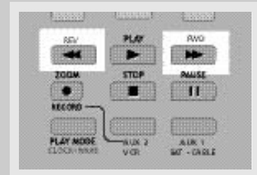

2. Press **PLAY** at any time to resume normal playback.

Time search

1. Press **INFO** on the remote during playback, info bar will appear.
2. Press **LEFT/RIGHT** on the remote to highlight the time.
3. Use the **number** buttons to input the time you want to skip to.
4. Press **OK** on the remote to confirm.

Freeze frame, frame advance

1. Press **PAUSE** on the remote control to freeze the picture during playback.
2. Press **PAUSE** on the remote control to enter frame advance mode.
3. Press **REV** or **FWD** to advance frame by frame.
4. Press **PLAY** to resume normal playback.

DPL907VD-EN DVD 4/2/04 6:10 PM Page 2

Slow motion playback

1. Press **PLAY/PAUSE** on the main unit or **PAUSE** on the remote control to freeze the picture during playback.

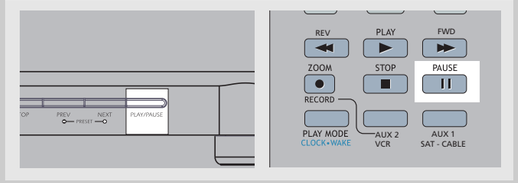

2. To advance picture in slow motion. Press **FWD** on the remote control for forward slow motion and **REV** (DVD only) for backward slow motion
Press repeatedly to change speed to 1/16 times, 1/8 times, 1/4 times and 1/2 times.

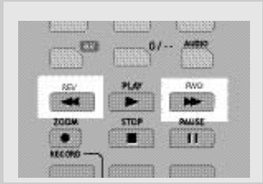

3. Press **PLAY/PAUSE** on the main unit or **PLAY** on the remote control to resume normal playback.

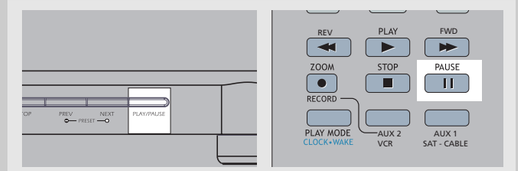

On-screen banner display

You can access the on-screen banner display during playback to select many playback features. Each feature is illustrated with an icon. However, each feature shown in the banner is available only if the disc was created with that particular feature.

An invalid icon appears on the screen when you select an icon that does not function. Also, the icon is “greyed out” to tell you so.

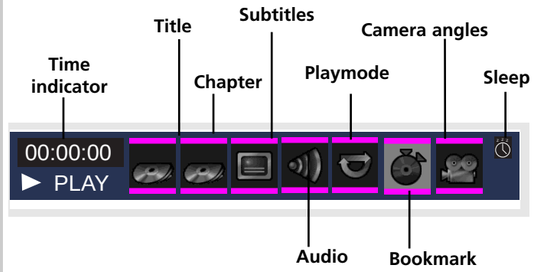

General use

1. Press **INFO** on the remote control during playback to show the on-screen info banner.

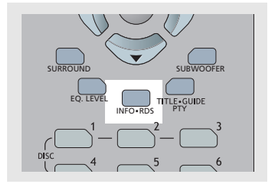

2. Use the **LEFT** or **RIGHT** arrows on the remote control to move the cursor on the banner, the selected feature icon will be highlighted.

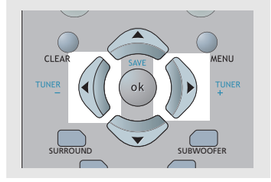

3. Press **OK** to open the menu corresponding to the selected feature.

4. Press **INFO** again to exit OSD menu.

Selecting a title

1. Open the title menu.

2. Enter a title number using the number keys on the remote control. You can also use **UP/DOWN** to change the title number.

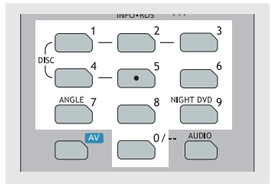

Note:
Some discs have one title only.

Selecting a chapter

1. Open the chapter menu.

2. Enter a chapter number using the **number** keys on the remote control. You can also use **UP/DOWN** to change the chapter number.

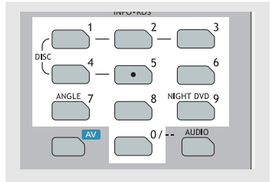

Note:
The chapter feature will not work if the disc is not formatted with separate chapters.

Selecting an audio language

1. Open the audio menu, or press **AUDIO** on the remote control to select the audio channel.

2. Press **UP/DOWN** to select the audio channel you want.

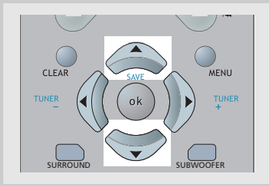

Note:
This feature only works if the disc was created with multiple audio tracks.

Selecting a subtitle language

1. Open the subtitle menu.

2. Press **UP/DOWN** to select the subtitle you want.

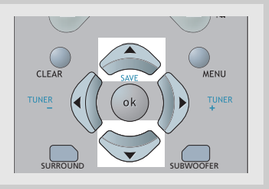

Note:
This feature only works if the disc was created with subtitles.

DPL907VD-EN DVD 4/2/04 6:10 PM Page 4

Selecting an camera angle

1. Refer to page 20 “General use” to open the camera angle menu, or press **ANGLE** on the remote.

2. Press **UP/DOWN** to select the angle you want.

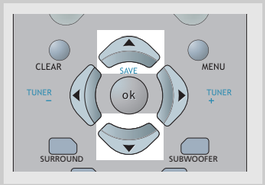

Note:
This feature only works if the disc was created with multiple angles.

Selecting an zoom ratio

1.Press **ZOOM** on the remote to select the zoom ratio.

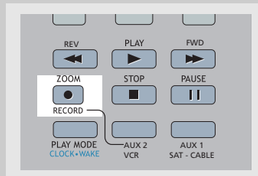

Using bookmarks

The bookmark feature allows you to mark a point on the disc for quick access. You can store up to 12 bookmarks.

Adding bookmarks

1. Open the bookmark menu.

2. Use the arrow button on the remote to move the cursor, then press **OK** to add a bookmark when reaching a scene of interest.

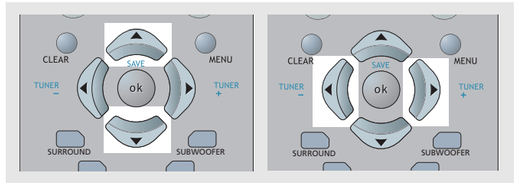

3. To add another bookmark, move the cursor to the next bookmark location with the arrow button. Then press **OK** to add a bookmark when reaching a scene of interest.

4. Press **INFO** to exit menu.

Recalling bookmarks

1. Open the bookmark menu.

2. Use the arrows on the remote to move the cursor to the bookmark location you want to recall.

3. Press **OK** to recall the bookmarked scene.

4. Press **INFO** to exit menu.

Clearing bookmarks

The bookmarks are cleared each time a disc is removed from the player or when the power is turned off completely.

Or you can manually remove bookmark by the following steps:

1. Open the bookmark menu.

2. Use the arrows on the remote to move the cursor to the bookmark location you want to delete.

3. Use the arrow button on the remote to move the cursor to the trash icon.

4. Press **OK** to delete the bookmarked scene.

Play mode

1. Refer to page 20 “General use” to open the playmode menu, or press **PLAYMODE** directly.

2. Press **UP/DOWN** to select among :
Standard > Program > Random > Title Repeat > Chapter Repeat > Repeat AB > Standard

3. Press **OK** to confirm the setting.

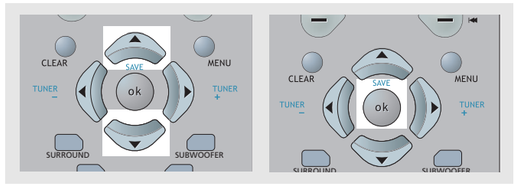

Program playback

Edit program

1. Open the play mode menu to access the program mode.

2. The box under “Title” will be highlighted automatically. Use the arrows on the remote to select title and chapter.

3. Press **OK** to add selected track and chapter(s) onto playlist.

EN

4. Use the arrow buttons to highlight “Done” and then press **OK**.

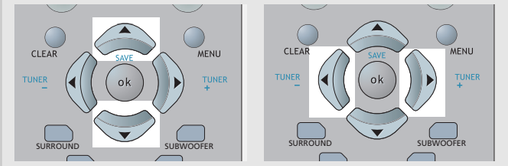

5. Follow the instruction on screen to start program playback.

Note:
You can select at maximum 24 items by repeating steps 2 - 3.

DPL907VD-EN DVD 4/2/04 6:10 PM Page 6

Insert items to the playlist

1. Select the program menu from the OSD banner to display the program edit playlist.

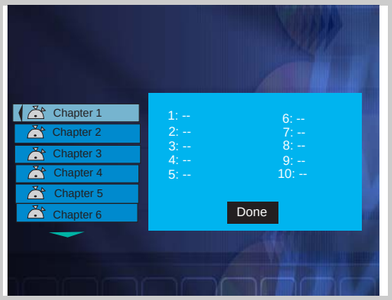

2. Use **LEFT/RIGHT** to select Title or Chapter, then **UP/DOWN** to select the number.

3. Press **OK** on the remote to add new item to the playlist.

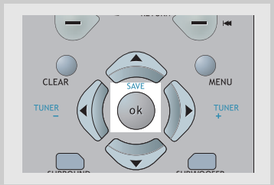

4. Use the arrow buttons to highlight “Done” and then press **OK**.

Delete items on the playlist

1. Select the program menu from the OSD banner to display the program edit playlist.

2. Press **CLEAR** on the remote the delete the last item on the playlist.

3. Repeat steps 2 to delete additional items.

Cancel program

Program will be cancelled when;
1. the disc tray is opened;
2. power is turned off.

Set up menu

General use

1. In STOP and RESUME mode, the set up menu will be displayed on screen. The menu shows the current settings.

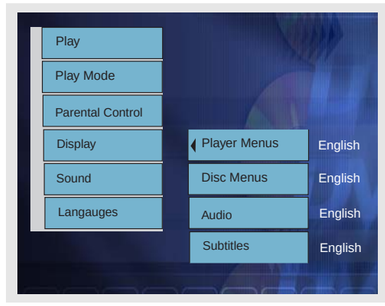

2. Use the arrow buttons to highlight an option and press **OK** to open the selected menu.

3. Press the **LEFT** arrow to go back to the previous menu or press **CLEAR** to exit the setup menu completely.

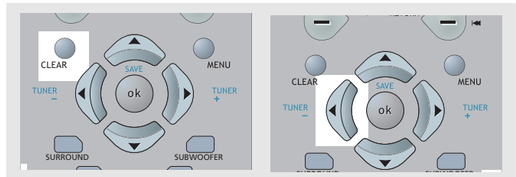

EN

Audio language

This step will define the default audio language. Choosing an audio language from the on-screen banner display will only overwrite this setting temporarily.

Note:
If the selected language is not available on a disc, that disc's own default language will be used instead.

1. Open the audio language menu.

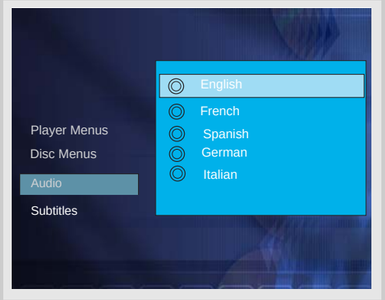

2. Use **UP/DOWN** to select a language and then press **OK**.

DPL907VD-EN DVD 4/2/04 6:10 PM Page 8

Subtitle language

This step will define the default subtitle language. Choosing a subtitle language from the on-screen banner display will only overwrite this setting temporarily.

1. Open the subtitle language menu.

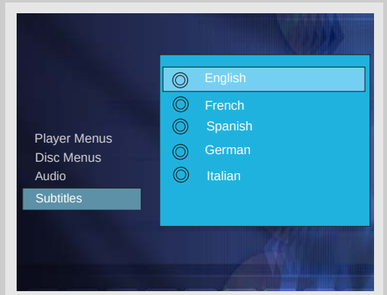

2. Press **UP/DOWN** to select a language and then press **OK**.

Menu language

This step will define the language of menus and other short messages shown on screen.

1. Open the menu language menu.

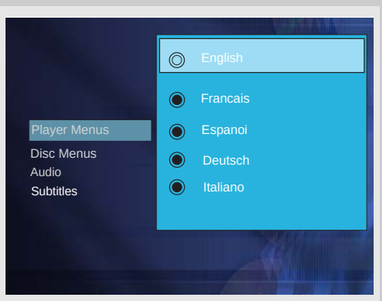

2. Use **UP/DOWN** to select the language and then press **OK** to return to the main menu.

When you turn up the unit for the first time:

1. An startup menu will show on the screen when you turn on the unit for the first time.

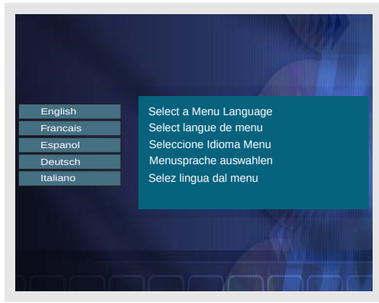

2. Use **UP/DOWN** to highlight the language you want, then press **OK**.

3. The chosen language will be your default menu language.

Rating (Parental control)

This setting prevents the playback of DVDs that may not be suitable for all audiences, by using the rating level that may be encoded on the disc. If the rating level of the disc is higher than the preset level (to be set in this step), the playback will be prohibited unless the password (see next step) is entered.

1. Open the rated title menu under Parental Control.

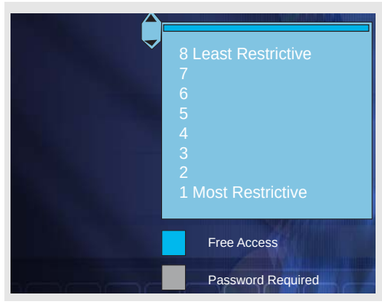

2. Use **UP/DOWN** to highlight the rating which require a password to start disc playback. Press **OK** to return to the main menu. Ratings highlighted in blue require a password.

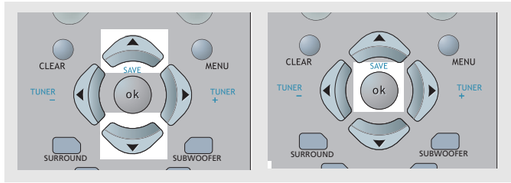

The rating feature works in accordance with the rating encoded in the DVD disc software. Keep in mind that not all movies and discs are rated. The player includes a total of 8 rating steps, corresponding to the existing disc rating steps. These additional steps allow for a better control the of program playback for all audiences.

Level 8: All DVDs can be played (Factory preset).
Level 7 to 2: DVDs for general audiences/ children can be played.
Level 1: DVDs for children can be played, DVDs for adults/ general audiences are prohibited.

EN

Unrated Titles

When this function is enabled, the unit will require the user to input password before viewing unrated DVD.

1. Open the unrated titles menu under Parental Control.

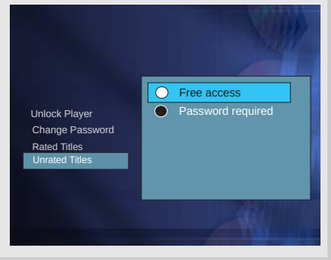

2. Use **UP/DOWN** to highlight the option “Free access” or “Password required”. Press **OK** to confirmre.

Password

Set password

To restrict the viewing of rated DVDs, a four-digit password must be selected.

1. Open the “Lock Player” menu.

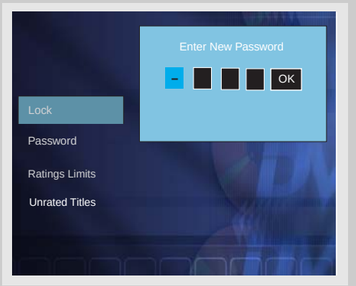

2. Use the number buttons to enter the password and then press **OK**.

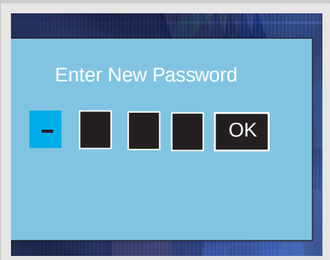

3. Repeat step 2 to confirm the password.

DPL907VD-EN DVD 4/2/04 6:11 PM Page 10

Important:
Keep the password in a safe place or remember it reliably as access to rated discs or rating / password menus requires the correct password.

Change the password

In order to change the password in parental lock menu, the current password must first be entered.

1. Open the Parental Control menu.

2. Use the number buttons to enter the password.

3. Use **UP** / **DOWN** to select “Change Password” and then press **OK**.

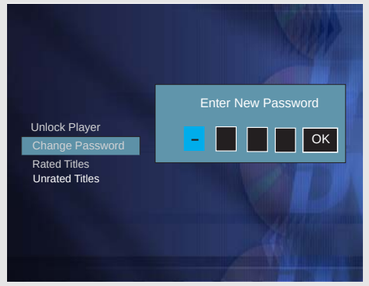

4. Use the number buttons to enter a new password and then press **OK**.

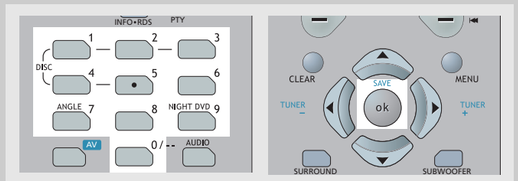

5. Repeat the above step to confirm the password and return to the password menu. Use the **LEFT** arrow to return to the main menu.

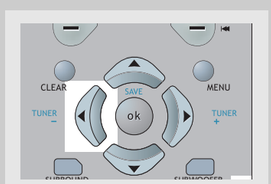

Clear password

1. Open the Parental Control menu

2. Use the number buttons to enter the password.

3. Select “Unlock Player” and press **OK**.

TV aspect

This step selects the TV aspect, wide-screen (16:9) or conventional (4:3).

1. Open the TV Image menu.

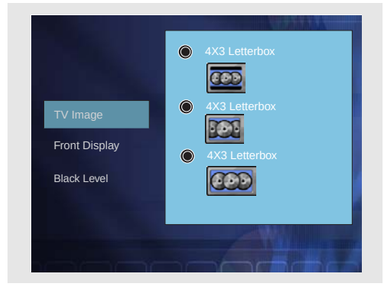

2. Use **UP/DOWN** to select TV aspect and then press **OK** to select.

If you have a wide-screen (16:9) TV, choose “16:9 Widescreen”.

- For 16:9 movie you will get
(Do not select 16:9 widescreen setting if you are using a 4:3 TV set, or the image may look distorted with some DVD disc.)

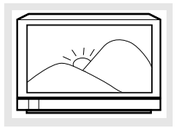

- For a 4:3 movie you will get



If you have a conventional (4:3) TV,
- if you select 4:3 letterbox for a 16:9 movie, you will get

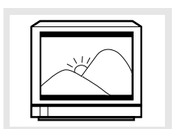

- if you select 4:3 Pan Scan for a 16:9 movie, you will get (the left and right edges are hidden)

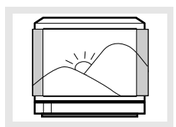

- for a 4:3 movie, for both selections, you will get

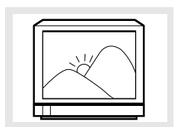

EN

Dimmer level

You can adjust the brightness level of the front display.

1. Open the Front Display menu.

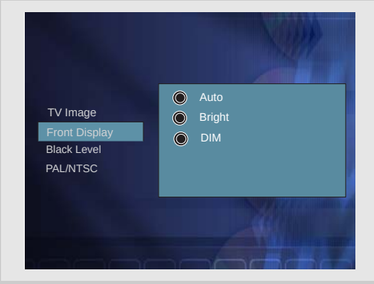

2. Use **UP/DOWN** to select brightness level and then press **OK** to select.

Black level

You can adjust the contrast range of the video playback.

1. Open the Black Level menu.

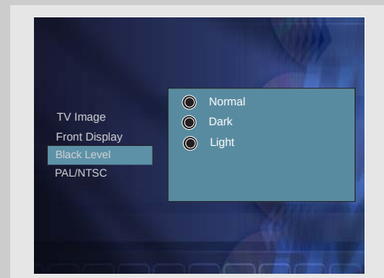

2. Use **UP/DOWN** to select contrast range and then press **OK** to select.

actual unit OSD display “brightness level” instead of “contrast range”